

Honeywell Vista User guide

Before arming the system, make sure the ready light is on.

Press * to view any open zones.

Arming in Away mode:

Away mode is used when leaving the building, it arms every sensor.

- 1) Enter your 4-digit code then press 2 (AWAY).
- 2) If quick arm is enabled, press # then 2 (AWAY).

Arming in Stay mode:

Stay mode is used when staying in the building, it will not arm the motion sensors.

- 1) Enter your 4-digit code then press 3 (STAY).
- 2) If quick arm is enabled, press # then 3 (STAY).

Disarming the alarm:

Turns the system off.

- 1) Enter your 4-digit code then press 1 (OFF).
- 2) The armed light should turn off. If you make a mistake, press # and try again.

Turning the Chime on/off:

Turns the door/window chime on or off.

- 1) Enter your 4-digit code then press 9 (CHIME).
- 2) The keypad should display chime when it is enabled.
- 3) Test the chime by opening a door, the keypad should give 3 quick beeps.

Silencing Troubles:

If your system has a trouble, the keypad will beep and it will display the fault.

- 1) Enter your 4-digit code then press 1 (OFF) twice to silence the troubles.
- 2) Call your security company to diagnose the trouble.

Bypassing a zone

If you bypass a sensor it will not be active the next time the system is armed.

- 1) Enter your 4-digit code then press 6 (BYPASS).
- 2) Enter the 2-digit zone number you want to bypass followed by #.

