

Concord 4 User guide

Before arming the system, make sure all the perimeter zones are closed.
Press * to view any open zones.

Arming in Away mode:

Away mode is used when leaving the building, it arms every sensor.

- 1) Press 3 (AWAY)
- 2) Enter your 4-digit code.

Arming in Stay mode:

Stay mode is used when staying in the building, it will not arm the motion sensors.

- 1) Press 2 (STAY)
- 2) Enter your 4-digit code.

Disarming the alarm:

Turns the system off.

- 1) Press 1 (DISARM)
- 2) Enter your 4-digit code.

Turning the Chime on/off:

Turns the door/window chime on or off.

- 1) Press 7 1
- 2) Test the chime by opening a door, the keypad should give 3 quick beeps.

Silencing Troubles:

If your system has a trouble, the trouble light will be on and the keypad will be beeping.

- 1) Press * to view the status and silence the beeps for 10 hours.
- 2) Call your security company to diagnose the trouble.

